



**Universal Beer Tap - S/S (#33000061)** Complete with Fat Lock Tap Tail (#66000004) Short Black Handle (#33000003) & Tap Brush Sanitary Plug (#33000090)



1. Remove coupling nut & tap tail. A **C-Spanner (#33000002)** is the best tool for this. Remove coupling gasket (**flat O ring**) located between the tap body & the tap tail.



2. Loosen & remove lever short thread by rotating knob lever bonnet anti-clockwise. Pull lever away from tap body. Remove the sealing rubber and ball washers from lever & replace in same order.



3. Push **valve shaft (Part No: 33277573)** through the tap body so that it can be removed from the threaded entrance into the tap.




4. Remove tap shaft O ring & valve seat & replace.



5. Remove **SFT 10 O-ring (#87700108)** & replace.



6. Looking up the tap body, fit the coupling gasket "**flat O ring**" before reconnecting again with the tap tail.

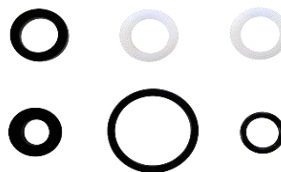

**Universal Beer Tap Kit (#35600310)**. If you have a leaking tap, it might be time to change the O rings. Remember to also grab a Pack of **SFT10 O-rings (Part No: 87700108)** for your tap tails.



**C-Spanner**

To open your Universal/Grundy Beer Taps (#33000002).

**Kluber Grease**

A small amount of Kluber grease will extend the life of O-rings (#47517171).

**O-Ring Pick Set (#00000090)**